

Date 16 06 2010 Time 22.00 Amsterdam.

Don't forget that you'll have to install the latest version of Samsung New PC Studio or the newest drivers. Your phone must be SIM unlocked.

Go to www.Samsung-Firmwares.com for:

- Firmwares
- Flashtools
- Guides

You'll need the following to flash the phone:

- ODIN 3 version 1.0 (flash program)
- .PIT file (the boot file of the phone)
- USB cable



How to get into the download mode

Press volume down + home key + power on.


Flashing tutorial


1. Open ODIN.
2. Open in ODIN the flash files and the .PIT file (use PDA if you've got only one file inside the firmware).
3. Remove the SD card and SIM card from the phone.
4. Turn the phone into the download mode.
5. Connect your phone with your computer and wait until the drivers are installed.
6. If the drivers are installed, click Start.
7. The phone will be flashed and once it's finished, it will boot up.
8. You have successfully flashed your phone.

Everything is on your own risk!

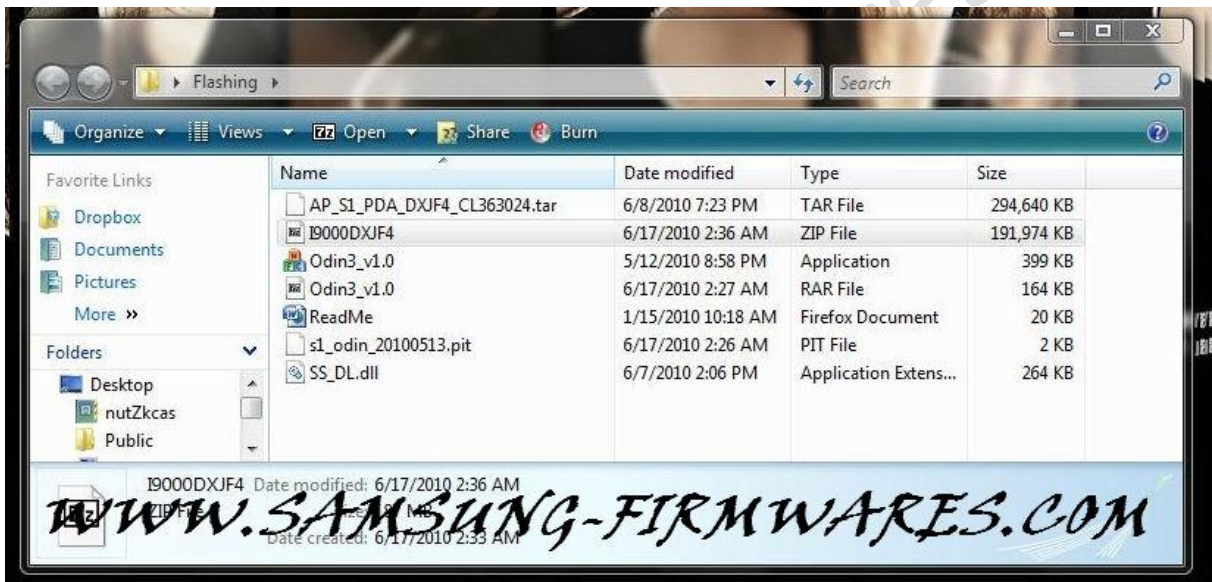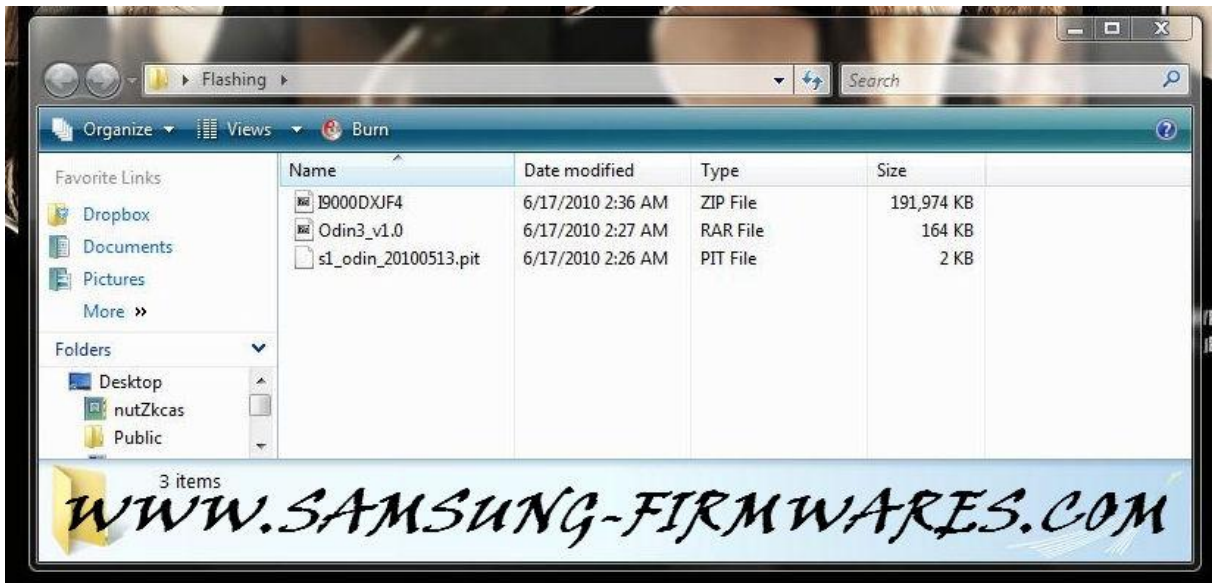

WWW.SAM...

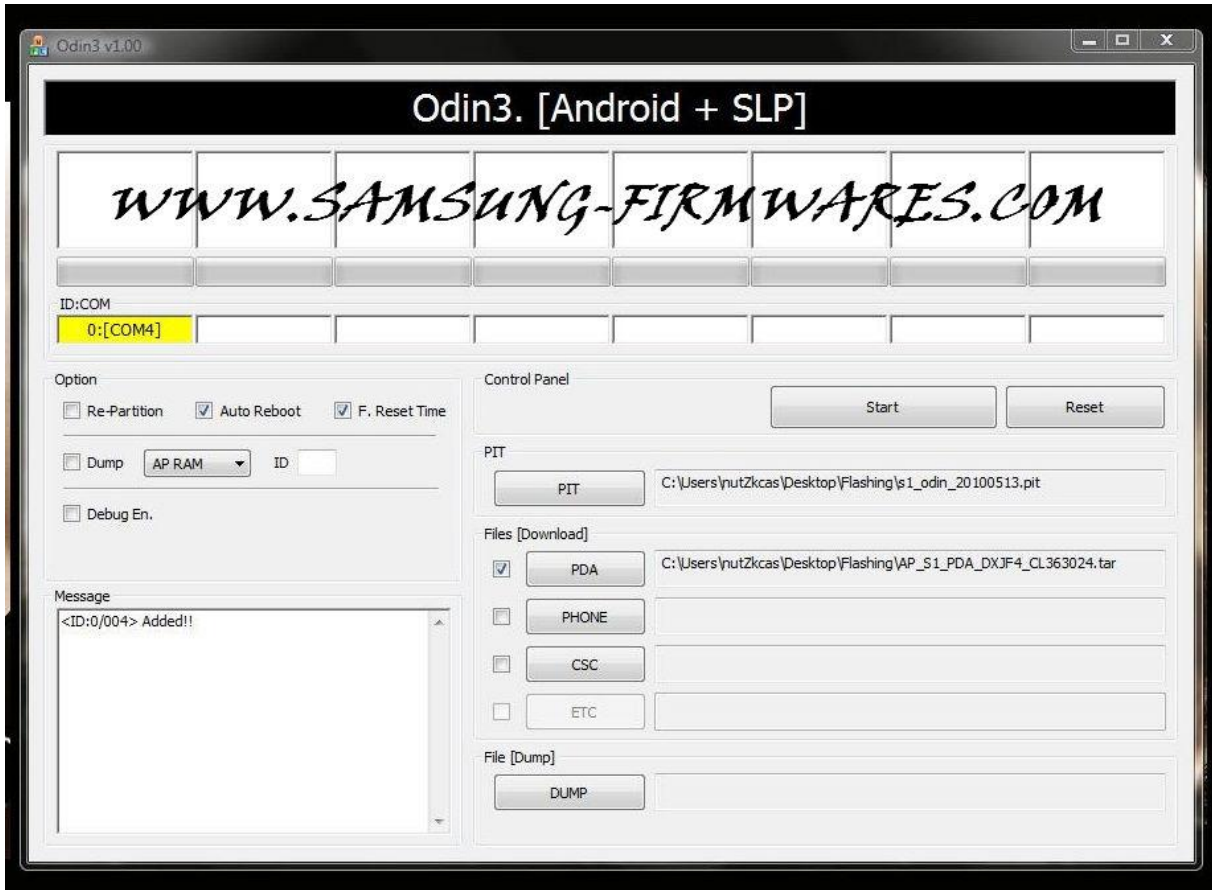

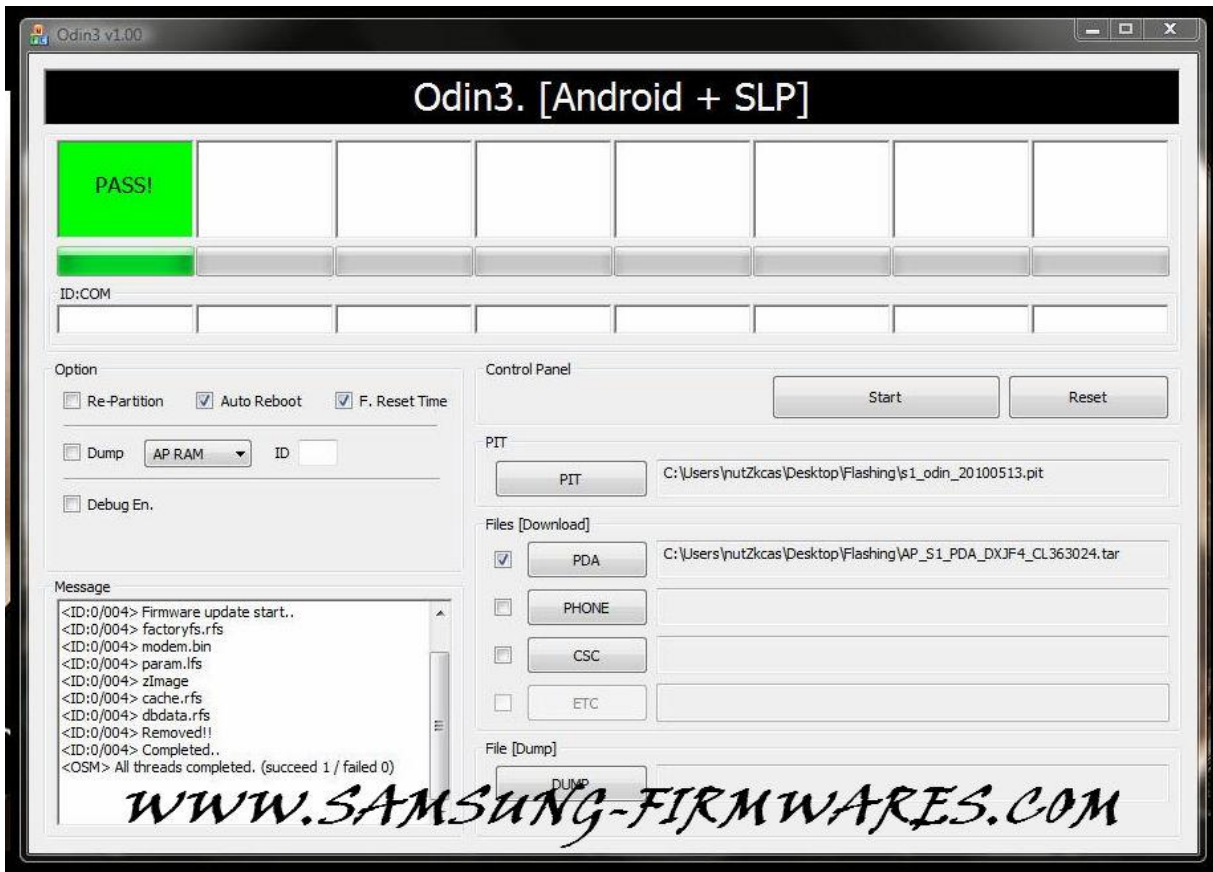

WWW.SAMSUNG-FIRMWARES.COM